








Keep your damp clothes out of your locker, and have them bone dry at the end of the day.

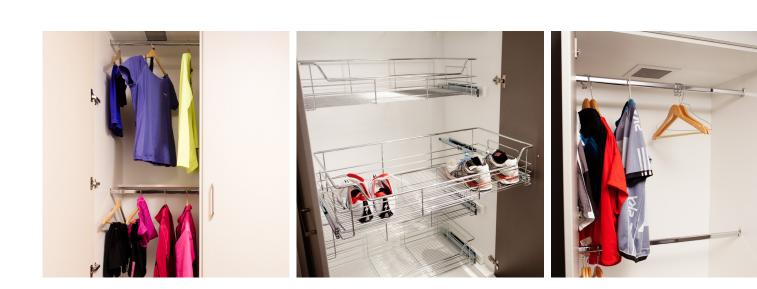



Airing Station.

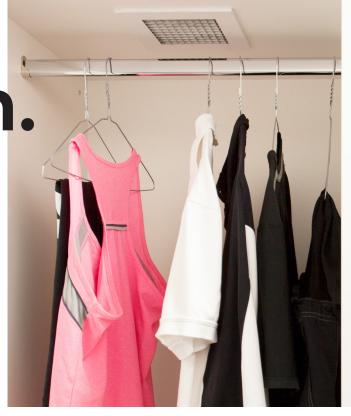

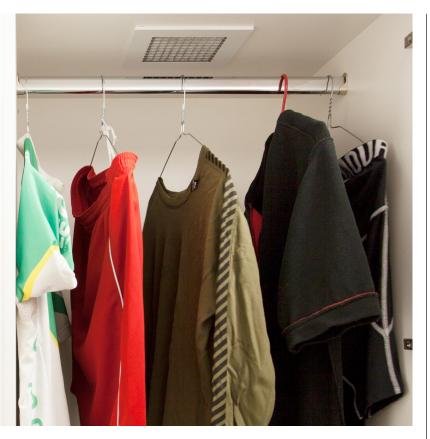

Material

Laminated MDF door (AUS: E0 MR) (with extensive colour range)

White particleboard carcass (AUS: E1 MR)

Moisture resistant base with black finish

Features

Clothes hanging rail

Storage baskets (Shoe store)

Concealed air supply inlet

"Airing station" decal on door


Specification

* Installation and connection of mechanical services are excluded from pricing for this unit and are done by others. **TOP VIEW**


SIDE VIEW

FRONT VIEW


1300mm(4'3") (AISLE CLEARANCE)

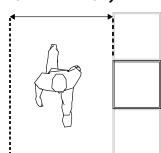



600mm (2')

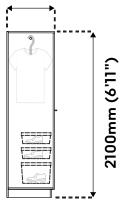

600mm (2')

 

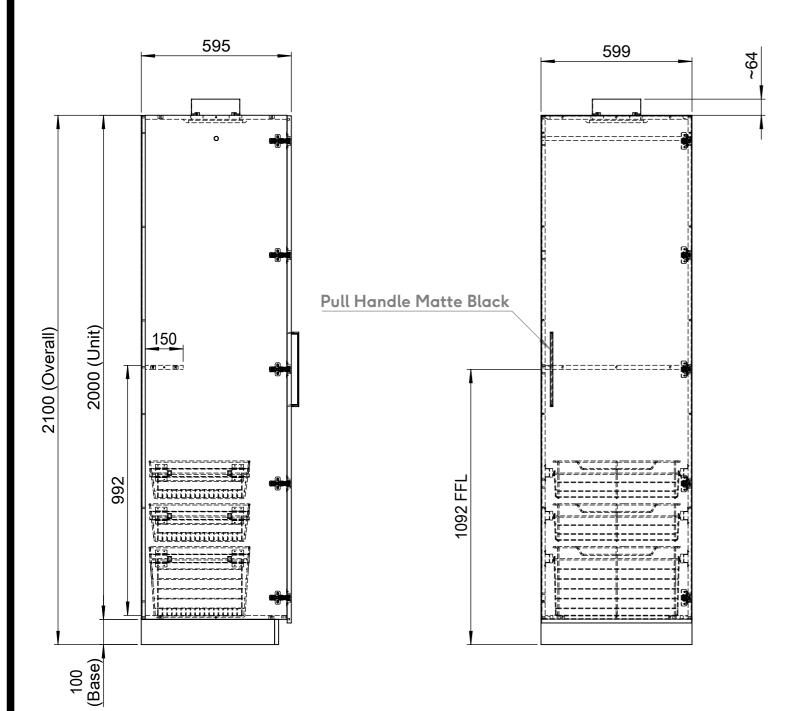

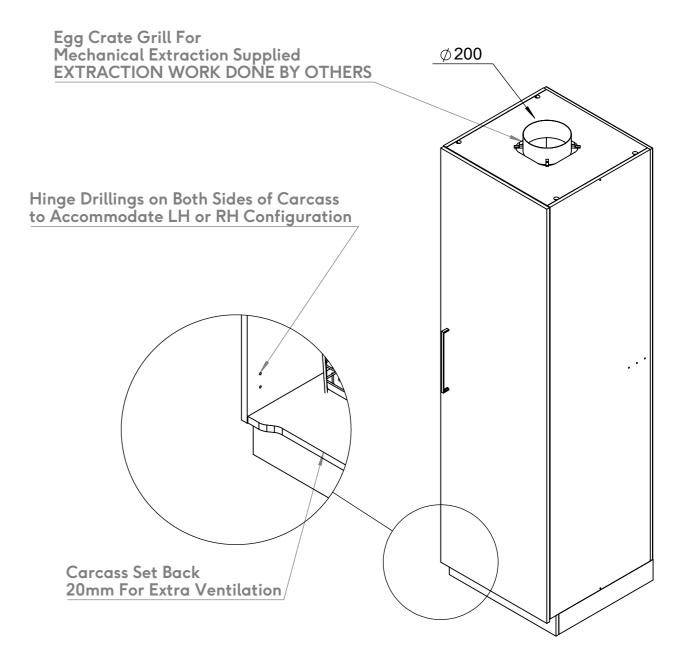

CIRCULAR PRODUCT

DATE:

CARCASS IS PRE-MADE (NO MODIFICATION)
PLEASE CONFIRM COLOUR

REV: DWN: CHK: DESCR:

ltem	Item Description		
Door Configuration (LH Hinge or RH Hinge)			
Door Handle	Matte Black		
Door & Panel Colour			
Locker Carcass	16mm White MR Particleboard		
Base Front Colour			
Door Edging	1 mm ABS Matching		
Carcass Edging	1 mm ABS Black		

Tive At Heart	Airing	Sta	tion

Heart Alling Sta					CIOII		
Proj	ect	•		SH	IEET 1 of 1		
P-		-DWG-	REV 1		SCALE: 1:1		

Airing Station Warranty and Technical Data

Warranty Information

Five At Heart's Airing Station comes with a standard 7 year warranty, effective from the handover date.

For the warranty period, we warrant that the equipment (and any materials) we supply will comply with the relevant standards at the date of installation. This warranty is limited and may be excluded in part or in full in light of user damage or failure to install to Five At Heart specification.

We recommend a monthly visual inspection for signs of damage or need for cleaning. Contact Five At Heart in the event of product damage.

Disclaimer

Images may differ from actual product and specifications may change without prior notice.

AUS, UK, CAN: manufactured to metric dimensions.

USA: manufactured to imperial dimensions.

Technical Data

Airing Station

Please note the extraction solution and connection is carried out by others and has varied from project to project, it is usually coordinated as part of the broader M&E plan.

The Airing Station requires top of unit extraction providing for damp garments to dry in a 7 hour period. (Fig 1)

No power supply is needed for the unit to operate (Top of unit extraction is required as per **Fig 1**)

The unit comes standard with a Metalflex Multivent Eggcrate Snap In extract vent installed, with a 200mm (8") neck (**Fig 2**)

In the units themselves, there are air inlets recessed into the base behind the doors. Each unit is independent from the other units, so each will require extract vents installed.

We recommend the units to be connected to mechanical ventilation. if mechanical ventilation is not available, an independent extraction fan can be connected (Fig 3)

Optional independent extraction fan is quiet and has a powerful air flow performance. The fan is white in colour. Electricity supply - 220-240V, single-phase, 50Hz.

Fan Speed rev/min - 2350

Average dB(A) at 3m - 33

Flow Rate m³/hr - 175

L/sec - 48

We do not recommend any additional heating to aid the extractor fans, the drying would be via the airflow through the airing units.

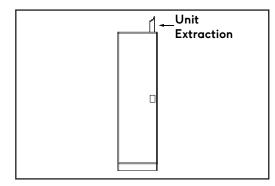


Fig 1 The Airing Station requires top of unit extraction, providing for damp garments to dry in a 7 hour period.



Fig 2 Metalflex Multivent Eggcrate Snap In extraction duct

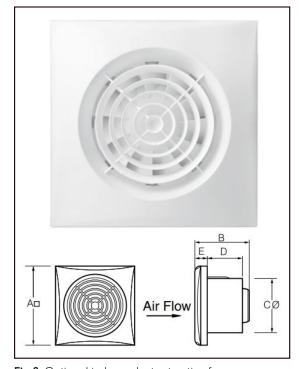


Fig 3 Optional independent extraction fan

Duct Size - 125mm (5") CØ - 118mm (5")

A□ - 180mm (8") D - 80mm (3")

B - 119mm (5") E - 30mm (1")

Airing Station Warranty and Technical Data

Technical Data

The units themselves sit upon a 100mm (4") plinth. This can be adjusted to suit the site.

Installation Requirements

Lockers/auxiliary units require a minimum of 16mm (5/8") at the end of each nib wall for filler panels and 50mm (2") for corner fillers.

Maintenance Requirements

If any moving parts appear to be malfunctioning, discontinue use and contact Five At Heart.

Cleaning

Airing Station

For general care and maintenance, simply wipe away most spills or marks with a damp cloth, or wipe clean with non abrasive household cleaner.

Do not submerge product at any point.

Avoid scourers and abrasives as they will damage the surface.

Do not use waxes or polishing products as they dull the natural shine.



Creating spaces for however you Roll...

fiveatheart.com

Australia North America Europe (+61) 1300 769 332 or au_info@fiveatheart.com (+1) 888 218 3433 or na_info@fiveatheart.com +44 (0)20 3137 1966 or eu_info@fiveatheart.com

