





Locklan Digital Touch Lock Work Manual

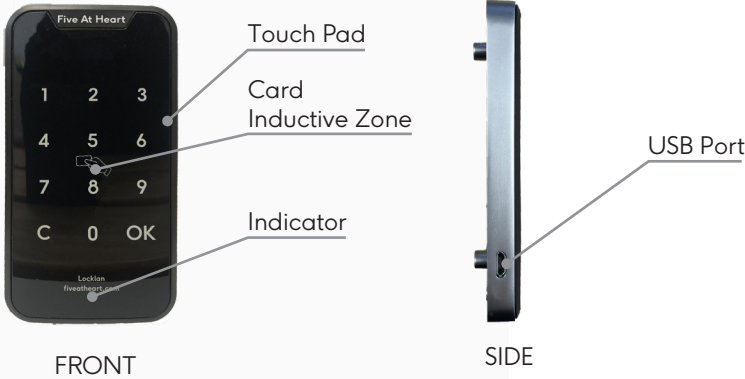

Touch Panel



Lock Body

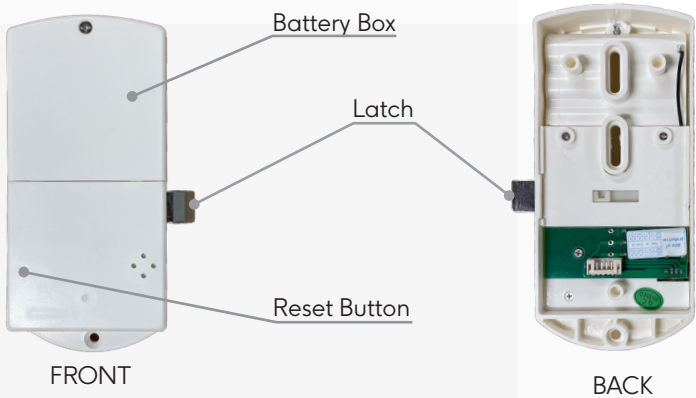

Technical Parameters

Card Reader Distance	5-10mm	Management Card	3
Management Password	Factory Default: 019266	Static Current	<50uA
User Passowrd	Factory Default: 1234	Dynamic Current	<120mA
Working Temperature	-25°C ~+ 55°C	Power Supply	4xAA Batteries
Working Humidity	10% ~ 85%	Approximate Battery Life	1 Year
Storage Temperature	-40°C ~+ 55°C		

Introduction

The Locklan Digital Touch is a touchpad lock that is operated by a 4-10 digit user PIN and is powered by 4 AA batteries. Locks are preset in public mode which allows any user to claim a locker by setting a PIN code. The locker will remain locked until this user PIN is entered again or the management master fob is presented.

How To Unlock A Lock When The User PIN Is Unknown Or Forgotten

Present the provided master fob to the centre of the lock face (card inductive zone)

Installation & Commissioning

1. Place Touch Panel on the front of the door using the corresponding holes ensuring "Five At Heart" is positioned at the top.
2. Plug in the 6 pin connector lead from the Touch Panel to the Lock Body on the back of the door.
3. Insert the 4 AA batteries & replace the battery cover. Replace with the small P1 screw.
4. Register management fobs:
 - Input current management password and press 'C'.
 - You will hear a long 'di' sound and the green indicator light will flash.
 - Place RFID card/fob on the card inductive zone.
 - You will hear a long 'di' sound meaning the new management card has been added successfully.

***Repeat this process for all 3 management fobs, to every lock.**

5. Set Auto-Open Timer
 - Hold the management card up to the 'card inductive zone'.
 - When the green light flashes, press 4-digits representing minutes + OK.
 - The time can be set between 1 minute - 0001 and 24 hours - 1440 minutes.

***Unless specified otherwise. enter 0000 + OK to disable auto-open time duration.**

Management Password

How To Change Management Password

Input current management password (factory default: '019266 + C') and you will hear a long 'di' sound and the green indicator light will flash.

Input new management password '***** + OK' and you will hear a long 'di' sound meaning the management password has now been changed.

NOTE: Password can consist of 4 - 10 digits

Setting RFID Cards/Fobs

How To Add Management Cards

Input current management password and press 'C'.

You will hear a long 'di' sound and the green indicator light will flash.

Place RFID card/fob on the card inductive zone 

You will hear a long 'di' sound meaning the new management card has been added successfully.

You can add up to 3 management cards.

How To Add User Cards

Place management card on 'card inductive zone' 1 time and you will hear a long 'di' sound with the green indicator light on.

Place management card on the 'card inductive zone' another time and the green indicator light will flash.

Now place the new user card on the 'card inductive zone' and you will hear a long 'di' sound meaning the new user card has been added successfully.

You can add up to 17 user cards.

How To Delete User Card

Place management card on 'card inductive zone' 1 time and you will hear a long 'di' sound with green indicator light on.

Place management card on 'card inductive' zone another time and the green indicator light will flash.

Place management card on 'card inductive zone' for a third time and the green indicator light will flash quickly.

Now place the user card that you would like to delete on the card inductive zone and you will hear a long 'di' sound meaning the user card has been deleted successfully.

Manner Mode/Audio Mode

How To Change Management Password

Press and hold 'OK' until green indicator light flashes 1 time - Set to manner mode.

Press and hold 'OK' until green indicator light flashes 1 time - Set to audio mode.

Public Mode Factory Default

Timer For Auto-Open After Locking

After the management card is added successfully, hold the management card upto the 'card inductive zone'.

When the green indicator light flashes, press 4-digits representing minutes + OK. The time can be set for 0480 minutes (8 hours), 0720 minutes (12 hours) or 1440 minutes (24 hours). Enter 0000 + OK to close auto-open time duration.

* Examples: to set the lock to open in 8-hours after locking, enter '0480' + OK or 12-hours '0720' + OK or 24-hours '1440' + OK

* After auto-opening, the temporary password or card will no longer be assigned to lock.

How To Set Temporary User Passwords

Input your password (4 digits to 10 digits) + OK.

When you hear a long 'di' sound, the temporary user password has been set successfully and will lock automatically.

NOTE: When the lock is occupied, the green indicator light will flash every 3 seconds, this means others will not be able to use this lock.

How To Use Temporary User Password

Input the password that has been set and press OK.

You will hear a long 'di' sound and the green indicator light will be on.

Open door within 5 seconds to take out your belongings.

Now the lock is ready to use by others.

How To Set Temporary User Card

Use card to close the inductive zone , you will hear a long 'di' sound and the green indicator light will turn on.

This mean the card has been set and will lock automatically.

How To Use Temporary User Card

Use card to close the inductive zone , you will hear a long 'di' and the green indicator light will turn on. Open door within 5 seconds to take out your belongings.

Now the lock is ready to use by others.

Public to Private Mode

1. Take out a single battery from the battery box and insert a pin or paperclip into the reset hole until you feel the button engage.
2. Whilst holding the reset button, place the battery back into the battery box.
3. Release the reset button once you hear the long 'di' sound.
This means private mode has been activated.
4. To change back to public mode, repeat steps and release reset button once you hear 3 long 'di di di' sounds.

NOTE: All cards will be deleted when changing modes.

Private Mode

How To Lock/Unlock

Input factory default user password '1234 + OK' or factory default management password '019266 + OK'.

You will hear a long 'di' sound and the green indicator light will turn on.

Lock will now open.

Follow these instructions for locking and unlocking.

NOTE:

* When password is wrong, you will hear 3 'di' sounds.

* When using the management password, the lock will change back to the default user password, 1234 + OK

How To Use Card To Unlock

Hold verified card up to card inductive zone.

You will hear a long 'di' sound and the green indicator light will turn on.

The lock will open.

NOTE:

* The lock will return to it's lock position after 5 seconds

* When card is not verified, you will hear 3 'di' sounds

Changing User Password

Input current user password, '1234 + C' and you will hear a long 'di' sound and the green indicator light will flash.

Input the new user password, '***** + OK and you will hear a long 'di' sound meaning the password has now been changed.

NOTE: Password can consist of 4-10 digits

Features

To Reset Back To Factory Default Settings

Press and hold the reset button for 3 seconds. A long 'di' sound will indicate that the lock has been reset.

Emergency Power Supply

When the battery is low, you can connect an external power supply through the USB port to temporarily power the lock.

Low Battery

When you hear 3 'di' sounds and green indicator light is on - this means battery is low and is recommended to change batteries before battery dies.